World's Smallest, Standalone **RUGGED DAQ SOLUTION** 

# **SLICE MICRO & SLICE NANO**

# Miniature, Modular, Rugged Data Acquisition Systems



SLICE MICRO and SLICE NANO are standalone, user-configurable data acquisition systems designed for extreme test environments. SLICE MICRO and NANO support a variety of external sensors to measure acceleration, strain, voltage, temperature and more.

SLICE is a modular data acquisition system featuring unmatched flexibility and reliability for critical test applications. Available in two ultra-small form factors, both SLICE MICRO and SLICE NANO make it easy to build systems in 3-channel increments by stacking layers with different channel and sensor input configurations. The BASE+ SLICE is the foundation of the system with the microprocessor, memory and control circuits. A simple interface provides power, trigger and communication signals for chaining multiple SLICE stacks and connecting to a PC.

Shown in a 6-channel IEPE configuration, SLICE MICRO and NANO include full signal conditioning and data writes directly to non-volatile flash memory.




#### **Features**

- features and channel count needed. Stack up to 24 channels per base and daisy-chain up to hundreds of channels per test.
- Data writes to 16 GB flash memory
- Minimum 10 sps per channel Up to 500k sps on ≤3 channels per stack
- practices, as well as NHTSA and FAA requirements

- Ultra-small SLICE modules configure to create the exact
- Intuitive, easy-to-use software
- Variable sampling rates: Up to 200k sps on ≤24 channels per stack
- Meets MIL-STD-810G for temperature, altitude and vibration
- Supports a variety of sensors, including full and half-bridge sensors, strain gauges, IEPE, voltage input, thermocouples
- SLICE MICRO offers built-in triaxial accelerometers, angular rate sensors, and external IEPE (piezo-electric) sensor inputs
- Complies with ISO 6487 and SAE J211 recommended

#### **Software**

DTS offers two powerful software options for SLICE MICRO and NANO. SLICEWare provides fast, easy tools for storing sensor information, performing data collection, viewing and exporting data. DataPRO is a fully-featured software with a comprehensive database and user interface for tracking sensor information, creating test objects and test setups, performing diagnostic routines, and conducting tests. Both software packages offer the most advanced self-diagnostics, plus support for EQX, ISO MME and many other data exchange file formats.








## **APPLICATIONS**

- Aerospace analysis
- Amusement ride testing
- Automotive safety
- Biomechanics
- Blast dynamics
- · Embedded monitoring
- · Helicopter & aircraft
- Impact testing
- In-dummy
- Injury investigation
- Parachute deployment
- Package testing: truck, air, ship & rail
- Pedestrian head & leg form
- Ride & handling
- Sound measurement
- Sports & safety equipment
- Vibration testing

#### **PRODUCTS**

**Diversified Technical Systems** designs and manufactures data acquisition systems and sensors for experienced test professionals.

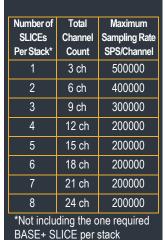

## **SERVICES**

24/7 Worldwide Tech Support ISO 17025 (A2LA) Calibration On-site Calibration & Training **Application Consulting** Software Integration **OEM/Embedded Applications** 

### WORLDWIDE SUPPORT

HELP CENTER (24/7/365 Access) DTS Technical Centers Global Sales Partners

#### **HEADQUARTERS**

Seal Beach, California USA

#### CONTACT US

Phone: +1 562 493 0158 Email: sales@dtsweb.com Web: www.dtsweb.com

### **Specifications**







BASE+ SLICE (NANO & MICRO)
One (1) required per stack – system microprocessor & memory MICRO 42 x 42 x 9 mm (1.65 x 1.65 x 0.35") NANO 26 x 31 x 8 mm (1.02 x 1.22 x 0.32") MICRO 30 g (1.06 oz), NANO 15.6 g (0.55 oz) Mass: Omnetics, circular locking, 12-pin Connectors: MICRO integrated. NANO cable assembly

BASE+ works will all legacy NANO & MICRO Compatibility: **DATA RECORDING** 

Recorder, circular buffer, multiple event, arm on Modes: power-up, and other modes available 16 GB non-volatile flash per SLICE stack Memory: Sample Rate: Minimum 10 sps per channel

Up to 200k sps on ≤24 channels per stack <See Chart for Max: Up to 500k sps on ≤3 channels per stack

TRIGGERING Hardware Trigger: Contact closure & TTL logic-level (active low) Level Trigger: Positive and/or negative level on any active sensor channel (first level crossing of any programmed sensor triggers system)

POWER Supply Voltage: 9-15 VDC: >11 VDC when using Battery SLICE (NANO) Current (Maximum): 70 mA @ 12 V plus sensor input SLICEs Power Control: Remote power control input for on/off Reverse current, ESD Protection:

SOFTWARE SLICEWare, DataPRO, API Control: Operating Systems: Windows® 7/8/10 (32- and 64-bit) USB: Ethernet available via SLICE Distributor Communication:





#### RIDGE SLICE (NANO & MICRO

Three (3) inputs for external sensors Size: MICRO 42 x 42 x 7 mm (1.65 x 1.65 x 0.32") NANO 26 x 31 x 5.5 mm (1.02 x 1.22 x 0.22") MICRO 25 g (0.88 oz), NANO 13.8 g (0.49 oz) Mass:

Omnetics, circular locking: 3 single-channel Connectors: 7-pin or 1 three-channel 16-pin

SIGNAL CONDITIONING

Number of Channels: 3 differential, programmable Input Range: ±2.4 V (2.5 V center) Bandwidth: DC to 35 kHz, programmable 1.0-1280, programmable Gain Range: Auto Offset Range: 100% of effective input range

Bridge Support: Software controlled half-bridge completion Shunt Check: Emulation method, automatically calculated Sensor ID: Maxim Integrated (Dallas) silicon serial number Linearity (typical):  $\leq 0.2\%$  (gain 1 to 320),  $\leq 0.5\%$  (gain >320) 0.5% including reference uncertainty Accuracy:

ANALOG-TO-DIGITAL CONVERSION

Type: 16-bit SAR (Successive Approximation Register) ADC, one per channel, simultaneous sample of all channels.

**EXCITATION** 

Method: Independent regulator for each channel 5.0 V, up to 20 mA, short circuit safe Voltage: Power Management: Shutdown when not armed or recording

POWER

Shock:

Voltage: Supplied via BASE SLICE

110 mA with 350 ohm bridges all channels Current (Maximum): Power varies significantly with sensor load

**ANTI-ALIAS FILTER** 

Fixed Low Pass: 4-pole Butterworth, standard knee frequency at 40 kHz Adjustable Low Pass: 5-pole Butterworth set by software from 1 Hz to 35 kHz Response: Meets SAE J211/ISO6487 response corridors

#### ENVIRONMENTAL

Military Standard: MIL-STD-810G

Operating Temp: -40° to 60°C (-40° to 140°F) (Method 501,502) Altitude: -40°C @ 15240 m (50000 ft) (Method 500) Exceeds 810-G vibration (Method 514) Vibration (Random): Humidity: 95% RH non-condensing

500 g, 4 msec half sine 5000 g option (SLICE NANO only)





IEPE SLICE (NANO & MICRO)
Three (3) inputs for external sensors

MICRO 42 x 42 x 7 mm (1.65 x 1.65 x 0.28") Size: NANO 26 x 46 x 7 mm (1.02 x 1.81 x 0.28") Mass: MICRO 28 g (0.99 oz), NANO 23 g (0.81 oz) 10-32 coaxial (Microdot-compatible) Connectors:

SIGNAL CONDITIONING

Number of Channels:

Input Range: 0.5-23.5 V (12 V center) Bandwidth: DC to 35 kHz, programmable Gain Options: 1 or 10, user programmable

Auto Offset Range: 100% of effective input range at gain of 1 Sensor ID: Works with EID or "TEDS" equipped sensors

ANALOG-TO-DIGITAL CONVERSION

16-bit SAR (Successive Approximation Type:

Register) ADC, one per channel, simultaneous

sample of all channels.

**EXCITATION** 

Current/Voltage: 2.2 mA constant current with 25 V source. Contact DTS for other options if needed. On/Off Control: Shutdown when not armed or recording

POWER

Supplied via BASE SLICE Voltage:

Current (Maximum): 85 mA with sensors connected to all channels

**ANTI-ALIAS FILTER** 

Fixed Low Pass: 4-pole Butterworth, standard knee frequency at 40 kHz Adjustable Low Pass: 5-pole Butterworth set by software from 1 Hz to 35 kHz Response: Meets SAE J211/ISO6487 response corridors



#### SLICE (MICRO only

Built-in triaxial angular rate sensor

MICRO 42 x 42 x 9 mm (1.65 x 1.65 x 0.35") Size:

Mass: 30 g (1.06 oz) Number of Channels: 3 orthogonal axes Range Options: ±300, ±1500, ±8k deg/sec

Bandwidth: 0-2,000 Hz

75 mA (power supplied via BASE SLICE) Current (Maximum):



# ACCEL SLICE (MICRO only) Built-in triaxial accelerometer

MICRO 42 x 42 x 9 mm (1.65 x 1.65 x 0.35") Size:

Mass: 30 g (1.06 oz) Number of Channels: 3 orthogonal axes ±25, ±100, ±500 g Range Options:

0-400 Hz (±25, ±100 g), 0-5,000 Hz (±500 g) Bandwidth: Current (Maximum): 65 mA (power supplied via BASE SLICE)



#### SATTERY SLICE (NANO only)

Optional back-up battery

Size: NANO 26 x 31 x 4 mm (1.65 x 1.65 x 0.16")

Mass: 7 g (0.25 oz)

Charge Status: Backup battery charges when input voltage to

BASE SLICE is >11 VDC

Charge Time: ~15 min. from complete discharge to full charge

(100 mA at input connector on Base)

Discharge Rate: ~5 seconds with 18 channels (1 Base + 6 Bridges)

CALIBRATION

Calibration Supplied: NIST traceable

ISO 17025: ISO 17025 (A2LA Accredited)

Service Options: Standard, On-site & Service Contracts available

**ACCESSORIES** 

See website for full line of SLICE NANO & SLICE MICRO accessories



Specifications subject to change without notice. © Diversified Technical Systems, Inc